

Standard 3m, 4.5m, 6m Marquee

Marquee Installation Instructions


Please read carefully before you attempt set-up!

- 1** Remove marquee frame from packaging. Place Marquee in centre of area to be sheltered. Have 2 people stand at opposite edges and whilst holding the two outer legs lift off the ground and step backwards stopping at arm's length.


Do not open fully as the frame needs to be semi closed to attach the fabric top – Do not extend the legs at this stage.




- 2** Remove the fabric roof from packaging and loosely lay over the top of the frame. Ensure that the reinforced centre / apex of the roof is over the centre pole. Make sure each corner of the roof is over the top of each leg of the frame. The underside of each corner has velcro that attaches to the top of each leg on the marquee frame. Ensure all corners are securely attached.

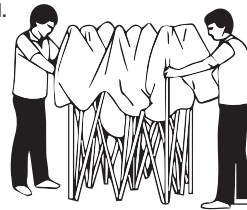


- 3** Have each person stand in the centre between the two legs of the frame. Hold the bottom of the diamond (shown here). Lift off the ground and step backwards until the frame extends out.

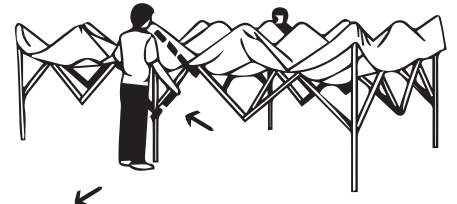


- 4** Go to each corner of the frame and engage the auto slider by pushing up with one hand while holding down the top of the leg with the other hand. This should then click into place. Repeat on all other legs.

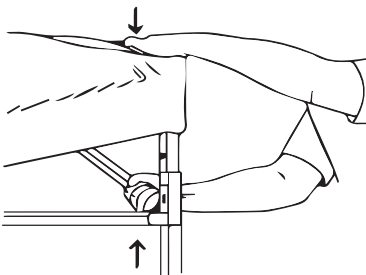

- 5** Lift two adjacent outer legs up and pull out the inner legs until they click into your desired height. We recommend extending the legs to the 3rd or 4th hole. You will need to ensure your marquee is secured by using the supplied pegs or ask about our leg weight accessories.

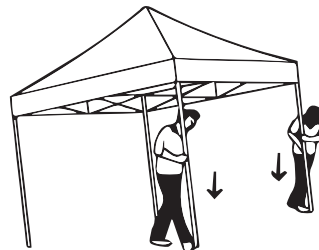


- 6** Click the Side Tensioning straps on the inside of the canopy onto the frame struts to ensure the overhang / valance is secured and tensioned correctly.

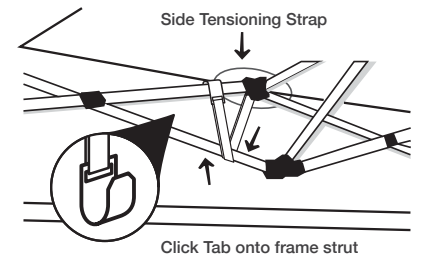

How to take down your Marquee

- 1** Lift two outer legs slightly, press the snap button or pull out pull ring to release the inner legs. Repeat on opposite sides.

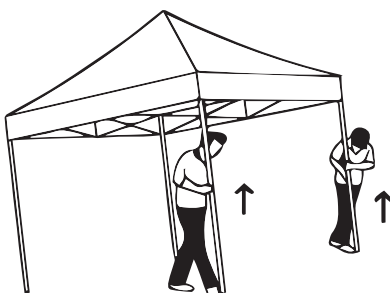


- 2** Release auto slider at each corner by pushing the snap button. Repeat on all four corners.

RELEASE SNAP-BUTTON

Tip...

We recommend that the tops be removed before packing away to eliminate the possibility of the fabric rubbing on the joints and wearing holes in the fabric.

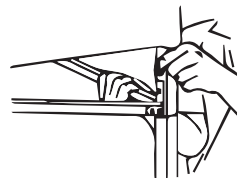

- 3** Hold the top of the diamond on opposite sides. Lift Up and shake shelter a little while stepping towards each other until it is ¾ closed. Hold two outer legs and push together to fully close. Then place marquee into the carry cover.

Ensure marquee is completely dry before closing.

