 



2m Commercial Café Market Umbrella

How to assemble your Umbrella


- 1** Attach the umbrella fabric top to the frame by inserting the arm ends into the pockets on the underside of the top.




- 2** Securely screw the base pole into the umbrella top pole.

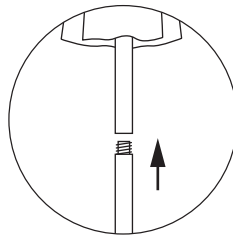

- 3** To open the umbrella, pull down on the pulley cord in the top mechanism to raise the arms and insert the locking pin into one of the 4 holes in the top pole.

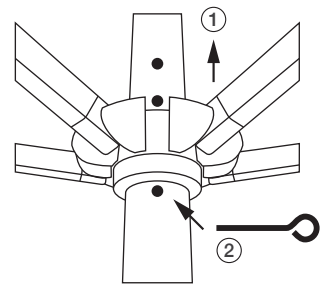

- 4** The angle of the umbrella top can be adjusted by inserting the locking pin into either one of the 4 holes in the top pole.

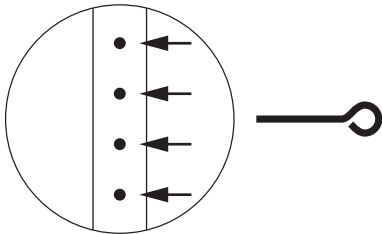


- 5** To prolong the lifespan of your umbrella, we recommend the top is closed when not in use and in windy or stormy conditions.

This prevents potential damage to the umbrella from the top flapping in the wind.


- 6** Insert the umbrella centre pole into the umbrella base.

How to disassemble your Umbrella

- 1** Pull down on the pulley cord in the top mechanism to raise the arms, then remove the locking pin. Carefully fold the frame down.

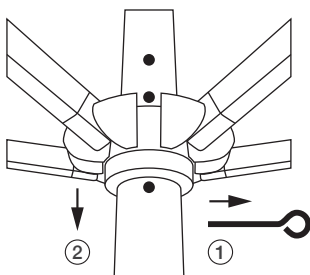

- 2** If storage of the umbrella is required, unscrew the base pole from the top pole.

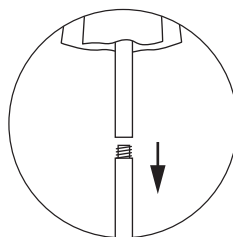

- 3** Ensure the umbrella top is completely dry before storing away.

