

GIANT INFLATABLE FLAG

ASSEMBLY INSTRUCTIONS (LABELS)

TYING POINT

FLAGPOLE

FLAG

ZIPPER

AIR VALVE

ANCHOR POINT



GIANT INFLATABLE FLAG

ASSEMBLY INSTRUCTIONS (STEPS)

1



Lay out all Giant Inflatable Flag parts and fasten all valves.

2



Connect the **Flag** to the **Flagpole**. (with the **Zipper**)

3



Inflate the **Flagpole** (using the provided air pump) and tie ropes to the **Tying Points** along the **Flagpole**.

4



SLIGHTLY inflate the **Base** (using the provided air pump) and place right-way-up (with the **White Cap Valve** facing upwards), ensuring the inner lining stays in the correct position to fill.

5



Using the **White Cap Valve**, fill the **Base** with 20 Litres of water. Once filled, disconnect the hose and secure the **White Cap Valve**.

6



PARTIALLY inflate the **Base** (using the provided air pump). While the base is filling with air, insert the **Flagpole** into the hole in the base.

7



Once the **Base** becomes tight around the **Flagpole** (and is full of air), disconnect the pump and secure the **Air Valve**.

8



Tie the ropes on the **Flagpole** through the **Anchor Points** on the **Base**, and tighten them until the **Flagpole** is erect.

9



Place your **Ground Stakes** around the **Base**, ensuring they are firmly planted into the ground. Then tightly tie down all ropes to secure the Giant Inflatable Flag in place.

SAFETY INFORMATION

- PLEASE USE THE SUPPLIED PUMP ONLY
- MAKE SURE ALL PARTS ARE SECURED CORRECTLY DURING ASSEMBLY
- DO NOT OPEN THE ZIPPER WHILE THE FLAGPOLE IS INFLATED
- KEEP AWAY FROM SHARP OBJECTS

IDEAL USAGE TEMPERATURE 30°- 50°(C)
PLEASE MONITOR IF TEMPERATURE IS OUTSIDE OF IDEAL RANGE.

HYDROSTATIC PRESSURE < 2.5KPA

CORE AIR PRESSURE < 20KPA